

INSTRUCTIONS

INSTRUCCIONES · INSTRUCTIONS



Kenney Manufacturing Company
1000 Jefferson Boulevard, Warwick, RI 02886 USA
www.kenney.com

79-14WRins


Room Darkening Wrap Rod

Cortinero para oscurecer la habitación

Tringle à rideau pour assombrir la pièce

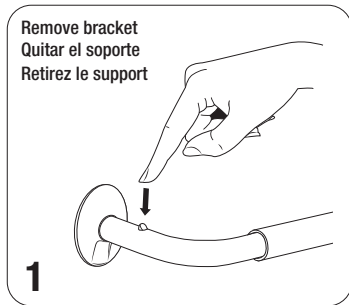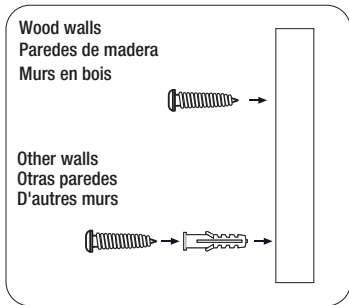


Install Screw
Instale los tornillo
Installez les vis




2


Slide Bracket onto screw
Deslice el soporte sobre el tornillo
Faire glisser le support sur la vis

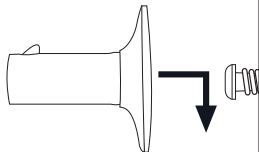


3

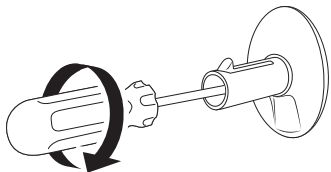

4

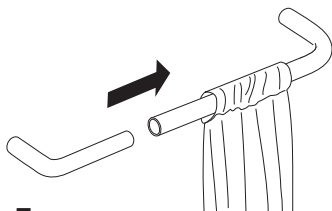

5



Click!



6

For lengths over 48"
Para longitudes de más de 122cm
Pour des longueurs supérieures à 122cm



7